 
 
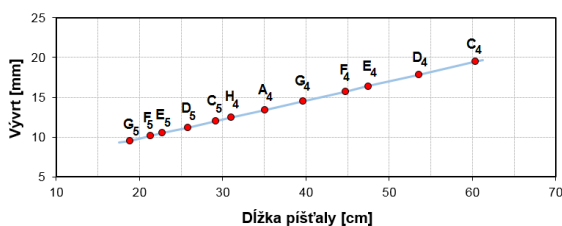 


Prehľad ladení a rozmerov pre šesťdierové píšťalky

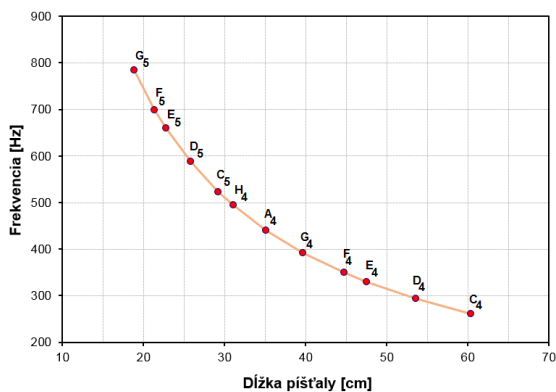

stupnica	Tóny z ktorých sa stupnica skladá						
C dur	C	D	E	F	G	A	H
C# dur	C#	D#	F	F#	G#	B	C
D dur	D	E	F#	G	A	H	C#
D# dur	D#	F	G	G#	B	C	D
E dur	E	F#	G#	A	H	C#	D#
F dur	F	G	A	B	C	D	E
F# dur	F#	G#	B	H	C#	D#	F
G dur	G	A	H	C	D	E	F#
G# dur	G#	B	C	C#	D#	F	G
A dur	A	H	C#	D	E	F#	G#
B dur	B	C	D	D#	F	G	A
H dur	H	C#	D#	E	F#	G#	B

	C	C#	D	D#	E	F	F#	G	G#	A	A#	H
0	16,35	17,32	18,35	19,45	20,6	21,83	23,12	24,5	25,96	27,5	29,14	30,87
1	32,7	34,65	36,71	38,89	41,2	43,65	46,25	49	51,91	55	58,27	61,74
2	65,41	69,3	73,42	77,78	82,41	87,31	92,5	98	103,8	110	116,5	123,5
3	130,8	138,6	146,8	155,6	164,8	174,6	185	196	207,7	220	233,1	246,9
4	261,6	277,2	293,7	311,1	329,6	349,2	370	392	415,3	440	466,2	493,9
5	523,3	554,4	587,3	622,3	659,3	698,5	740	784	830,6	880	932,3	987,8
6	1047	1109	1175	1245	1319	1397	1480	1568	1661	1760	1865	1976
7	2093	2217	2349	2489	2637	2794	2960	3136	3322	3520	3729	3951
8	4186	4435	4699	4978	5274	5588	5920	6272	6645	7040	7459	7902
9	8372	8870	9397	9956	10548	11175	11840	12544	13290	14080	14917	15804
10	16744	17740	18795	19912	21096	22351	23680	25088	26579	28160	29834	31608

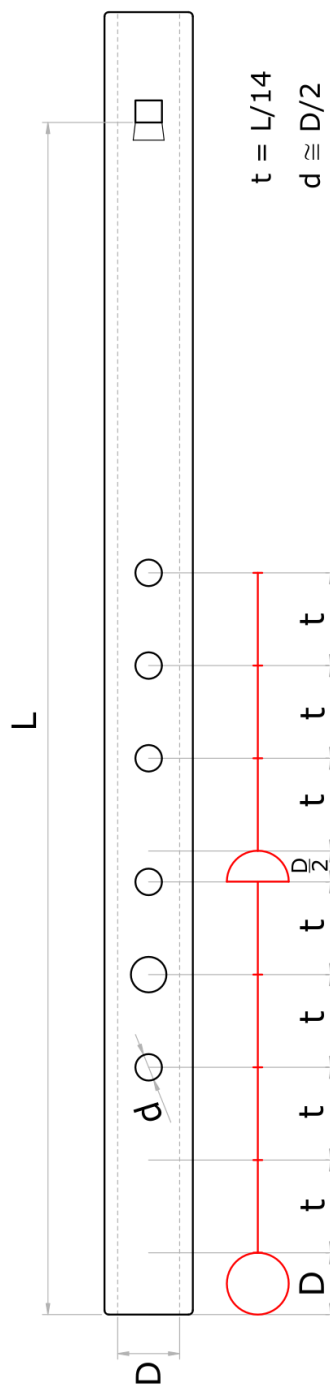

Kohútik jarabý

● ● ● ○ ○ ○ ○ ○ ○ ○ ● ● ● ● ● ●
 Ko - hú - tik ja - ra - bý, ne - chod' do zá - hra - dy
 ○ ○ ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●
 po - lá - meš ľa - li - u, po - tom ťa za - bi - jú.

